 


QUICK START GUIDE

1

 
Please Read Owner's Manual

Customer Service
Monday - Friday
8am - 3pm - Pacific Time
866-409-4581

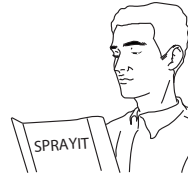


2

Attach Hose to Spray Gun

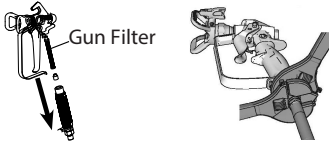

Hose Installation


Attach Hose to Inlet

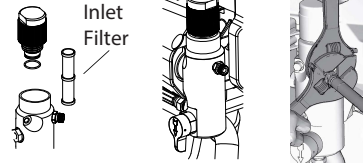



3

Spray Gun Tip and Guard Installation

 Lock Spray Gun
Trigger Lock

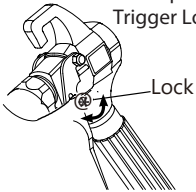

 Insert tip into guard.
Push and rotate tip clockwise.
Lock tip in place

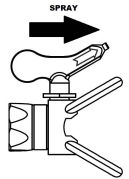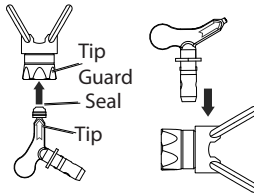



4

Prime Sprayer Before Spraying

Turn Power
Switch "Off"



 
Plug in Power
Cord to a
3-Prong Outlet

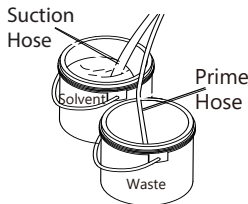

Rotate Prime/
Spray Valve
Down to Prime



Turn Pressure
Knob to Prime
or "+"

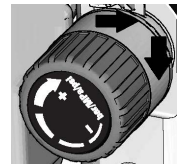


5

Prime with Solvent to Flush


The motor will start running.
The solvent will flow up the Suction Hose
and out the Prime Hose into the waste
container. Run for 1 minute and turn "Off".

 Turn Power
Switch "On"

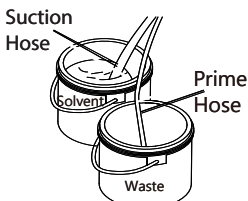

Prime Sprayer with Paint

The take the Suction Hose and put into the
paint container. Turn "On" the Power Switch.
The paint will flow up the Suction Hose and
out the Prime Hose. Turn "Off" the power.

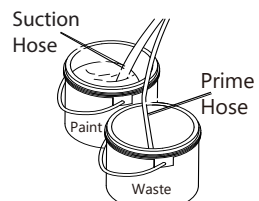

Prepare to Spray

 
 
6

Reverse Spray Tip. Prime and Spray

Add Prime Hose to Paint can


Turn Spray Tip to Spray

Turn Tip to Clear Clog

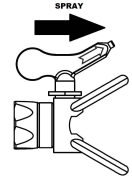

7

 Add Packing Saver Lubricant

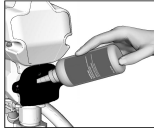


Spray


Turn Prime Valve to Spray



Turn Pressure Knob to Spray

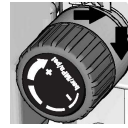

Spray Paint on Surface

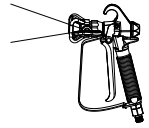 

8

Clean up

Turn Power Switch "Off"



Place Suction & Prime Hoses into Waste Container



Turn Prime Valve to Prime

 


Spray Gun into Waste Container




9


Place the Suction Hose into a container with solvent. Place the Prime Hose into a waste container.

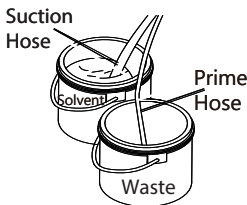

 Turn the power Switch "On". Run for 1minute and turn "Off" the power.




Turn Prime Valve to Spray

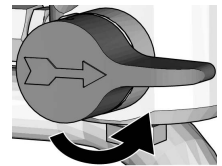 


10

 Lock Trigger Lock

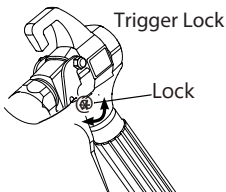


Remove the Spray Tip and Tip Guard

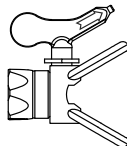 

Turn the power Switch "On".







 Unlock and Spray the Gun into Waste Container until paint is flushed out completely. Turn Power Switch "Off".

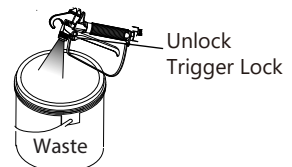

11

  Clean the Spray Tip, Tip Guard, Gun Filter, Manifold Filter and Suction Hose Screen in a container of solvent.

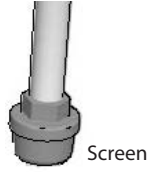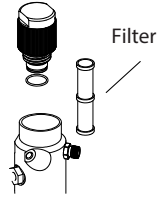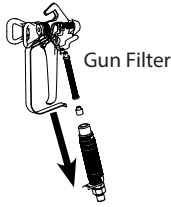

12

Storage

 
To protect all parts and components.

Clean parts with Mineral Spirits and

Flush sprayer with Pump Protector.

This will protect from corrosion and freezing

Place Suction & Prime Hoses into a container with Pump Protector. Prime to add Pump Protector





13

Turn Power Switch "Off"


Unplug Power Cord from Outlet

 Turn Pressure to the Lowest Setting (left)

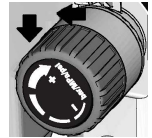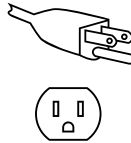

Remove Suction and Prime Hoses.
Turn Paint Sprayer on it's back."

 14

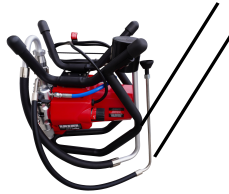

15

Add Pump Protector into the lower section of the pump.

