


# QUICK START GUIDE

1


Please Read Owner's Manual



2

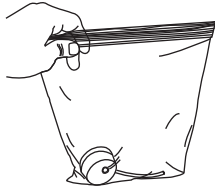

Air Filter Tube Installation

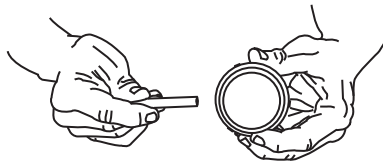


3

Air Filter Installation

Screw Air Filter (s) into the port (s) located on the motor head.

Hand tighten only

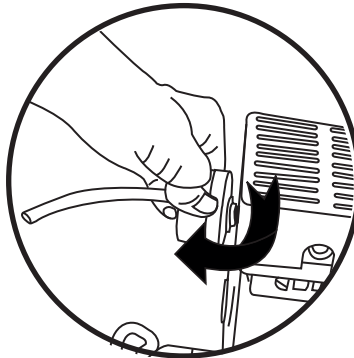

4


¼" Industrial  
"Push to Connect"  
Quick Connector

Push  
to Connect




# Drain Valve Operation


5

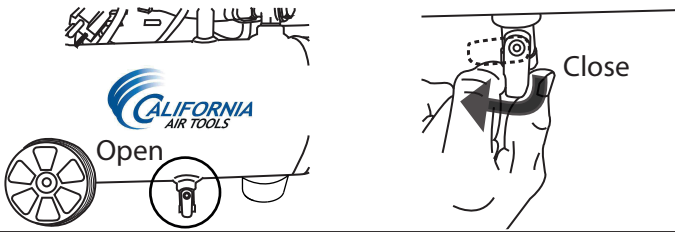


6

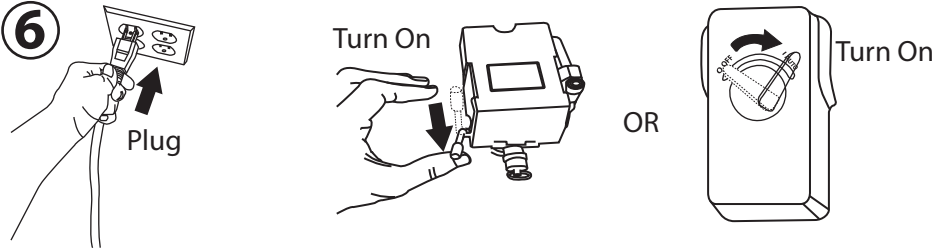

7

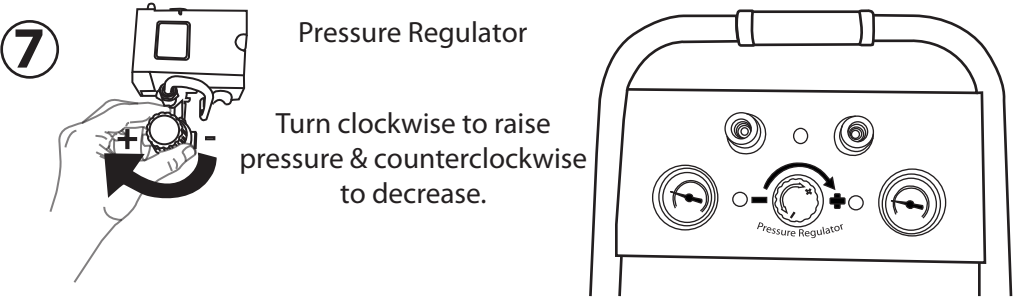

8

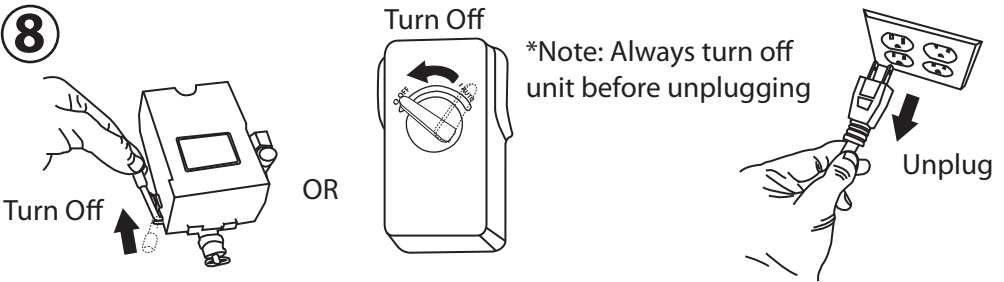

9

